HisEvilness

hisevilness.com/articles/technology/how-to-set-up-a-virpil-vpc-warbrd-base-and-constellation-delta-grip-

This guide will cover how to set up a Virpil VPC WarBRD with a Virpil VPC Constellation Delta Grip the old guide is no longer relevant since Virpil has some major software improvements. The newer software is, in general, easier to use and far more stable but can still be a bit overwhelming when using it for the first time. This guide is for the VPC Configuration Tool in Lite Mode since the Pro Mode can lead to bricking the base therefor is only advised for prosumers.

Update.

A new and better VPC Configuration Tool has been released and therefor the guide was updated to reflect that. The updated software release version is *VPC-JOY-200325*.

Assembly.


When your package arrives you will notice bubble wrap and other packing materials. You will have some spare parts like cams and springs, I use mine stock without changing anything. What you will need is a CR-V #10 bit remember to have one on hands.

Next up is attaching the base to the Constellation Delta grip, there is a connection male plug in the grip. Gently pull it out a bit so you have enough slack to attach it to the connector in the WarBRD base. Then align the grip with the base so it is centred and use the knob on the base to screw it in place. Remember when taking off the grip to gently remove the connection cable.



The next part is attaching the base plate to the WarBRD base, there are 4 screws in one

of the bags. Take the CR-V # 10 bit and align the screw holes and put each screw in, do not screw them in 1 by 1. Screw them in halfway down and then start on 1 corner, any corner you like and screw it down. Then do the same with the opposite screw so the plate aligns correctly and the screw will fit in the flush. Now tighten them all down to the base plate is firmly attached but do not exert too much force. You will also find some M3 rubber pads in the box place them on the bottom of the base plate. This concludes the assembly part, do a quick visual check if the Constellation Delta grip is correctly aligned.

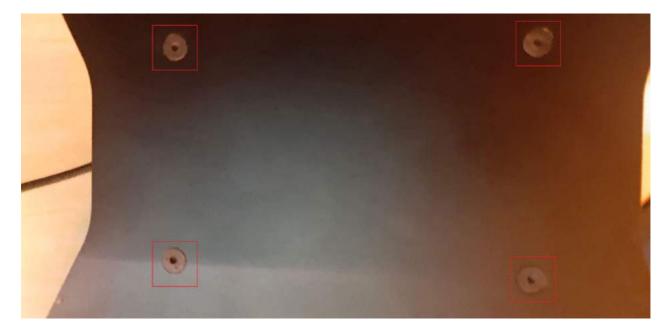

Getting Started.

Plug-in the USB male to a USB 2.0 Female on your PC make sure you use your 3.0 ports for external HDs and USB sticks. Download the latest version of the VPC Configuration Tool from Virpil here: <u>https://virpil-controls.eu/downloads/software.html</u> and install the software on a desired HD or SSD. When connecting your joystick for the first time windows will install some default drivers and it should show up in Devices and Printers. Also, check if your RGB light turns on when connecting the joystick if it does not turn on make sure you have connected the plug inside the grip to the base correctly.

Firmware Update.

Next step is to update the firmware of your Joystick with the latest version, an image is added to show the steps and the location of each step inside the VPC Config Tool.

- 1. Click on Firmware in the VPC Configuration Tool,
- 2. Select the correct device, if using multiple devices unplug all but 1 to prevent confusion.
- 3. Select the correct *.hexc, if multiple files exist check your devices with the latest file date.

- 4. Click on the big blue "Start auto firmware update"
- 5. This window tells you when the update is done and to go to the next step in the process.

VPC Configuration Te	ool [VPC+10Y-200325]	× = ×
	JD: 18 LC PID: 0C08 Lighting Node PRO (07C00 1082569 LCAFS ID 1085966 L JD: 1977 PD: 0003 RODE NT-US8 JD: 1977 PD: 0003 RODE NT-US8 JD: 1977 PD: 0005 with at HD Device JD: 1977 PD: 0205 with at HD Device JD: 1977 PD: 0205 with at HD Device JD: 1979 PD: 0217 RODCAT Kone Almo JD: 1971 PD: 0217 RODCAT Kone Almo JD: 1971 PD: 0217 RODCAT Kone Almo JD: 1971 PD: 0210 Commercient PRO (10021007 71140705) JD: 0010 PD: 2046 RIGHT VPC Stock WerBRO (VPC 3CV-200325)	2 * LOAD VPC DEVICE * SAVE VPC DEVICE * SAVE VPC DEVICE
	[DEVICE FIRMWARE UPDATE PAGE]	3
AXIS	Controler firmware file path [C:\Program Files (x86)\\PC Software Su	ite/Firmware_vpc_200325_[CHT-4TME5A32.14] hexc
	Starit auto firmware update	Stort firmware update procedure. Write page ok [177/177] Firmware update procedure finished. (please close bootloader mode) Set bootloader [VPC Bootloader] to device mode
	4	Auto firmware update - done. Please go to PROFILE, Select Base and Grip and make profile.
PROFILE		
FIRMWARE	1	
Windows Joysticks	VPC JOY TESTER Direct Input Viewer	

The update should last a minute maybe more if you're on an older PC but the software will tell you when it is done in the dark grey window with the steps taken for the update process.

Profile.

This section is more clear since the instructions are included within the VPC Configuration Tool but the step is included in this guide to prevent confusion.

- 1. Select the Profile tab.
- 2. Select your Base.
- 3. Select your Grip.
- 4. Select the side your device is located and used.
- 5. Select Create Profile.
- 6. Save to VPC Device.



You can export the profile however the final step will be calibration and you also want to save those settings. Another final step mentioned is the "Save VPC DEVICES" this is required in the final step hence also selecting the "Save current calibration".

Calibration.

Now it is time to calibrate all the axis on your Virpil WarBRD base and Constellation grip. Very important here is NOT to use the windows calibration and that you must use the calibration from the VPC Configuration Tool and you will have to remove any windows calibration by Windows Settings and by typing the search bar "Set up USB game controllers" and then selecting "properties" select the "Settings" tab and click "Reset to default". This should clear windows calibration now head back into the VPC Configuration Tool.

- 1. Click on the Axis tab.
- 2. Click the "CALIBRATE AXIS"

VPC Configuration Tool (VPC-J	OY-19072	3]																	-	a 1	ι
✓	VID:03EB PID:204A RIGHT NPC WarBRD Stuck (NPC-20Y-190723)																				
READY									.	SAVE	VPC D	EVICE		4	C	01	T	RO	LS		d):
[DEVICE	e axes set	TUP PAG	E]																		
AXIS Num	Name	Pre	Value	Valu	Source	Port	Su	Inv	Off	Sm	Ra//	Lin	Calbration	Cal.Min	Cal.Mid	Col	DZ Min	DZ Mid	DZ Max	Dyn.D2	d
11111 1	X	14	8192	50%	VPC_Sens	5	0	True	False	хZ	32951	0	With center	29329	32949 5549	36685 9327	2	2	2	0	-
3	r¥ r¥	14 14	8192 8192	50% 50%	VPC_Sens VPC_Stick	6	0 2	True Faise	False False	x2 x6	5545 7840	0	With center With center	1117 4960	7840	10784	2	2	2	0	c
BUTTON 5	rX Z	14 14	8192 8192	50% 50%	VPC_Stick VPC_Stick	1	3	False True	False False	x6 x6	8448 14032	0	With center With center	4864 13340	8448 14032	11216 1 4 566	2 10	10 10	2 10	5 0	C
			1775				949 2005		990 200		 2776-2			344) 3773							
											++++		-					-			
LED												_				1230.000		_			>
Axi			Range	Result	Actic	ie double an buttor	axesioo 1 D		Axe	s zocm Acti	on button	0	Axis	and the second se	ual detents Action but		÷	Made	~		
	mber fro	211 % 6	to %	button		ton mode	1000	~	Coe	filcient	of division	307 17	÷		ones Low(%) —	⊖ Hi	gh(%)	~		
0	8	8	• 🗧	0 8	50	kurce axe	a (D	\$					Throttle	axes virb	ual detents	(Seconda	ry)				
PROFILE	8	8		0 8		ation axis	s 0	÷					Axis 0		Action but	works	NAMES OF A DESCRIPTION OF A DESCRIPTIONO	Mode	~		
	6	8	• 8	0 8	Double	: axes D2	2 0	\$						7	ones Low(**)	~ *	gh(%)	~		
FIRMWARE																					
	set axes	sctup															CAL	BRATE A	XES		

Now your in the calibration screen this screen also has instruction included you will see various visual sliders with a red background this represents your axis and they are out of alignment, in this case, there are mechanical parts inside the base measured with sensitive sensors. For this Constellation grip, you have the X and Y-Axis you gently move the stick up, down, left and right. The Z-Axis can be calibrated by twisting the Constellation grip. And now to calibrate the rY and rX that is the small joystick above the scroll wheel and gently move that up, down, left and right. Now you can see the sliders aligned to their mechanical centre and their background changed to blue.

VPC Configuration Teol (VPC-JCY-19	0723] A RIGHT VPC WarskD Stid: (VPC-JOY-1907		LOAD VPC DEVICE		
AXIS AXIS DEVICE CALB Axes and E P P P P P P P P P P P P P		LTA 🗸 8336 🖨 💻		Axes calibration instructions 1. Sowly more all axes to their minimu 2. Return all axes to their center (neutronol) 3. Citek "Save Calibration" to add their 4. Sove the profile to the VPC device b "Save VPC Device" on the top box. If there are any problems, dick "Reset run through the calibration steps again	ral position. ew calibration data to the profile. y cicking Calibration" and
PROFILE			KEL	RESET CALIBRATION	SAVE CALIBRATION
Windows Joysticks	VPC JOY TESTER	Direct Input Viewer		Device PCB	ENTLITE Online 2.15.33

Saving to Device.

Now the final step is to head back to the Profile tab and select "Export Profile to File". Give the profile an easy to remember to name and select save. Each step is now saved to the joystick after each step but keeping a profile will be useful.

Joystick LED.

The LED is still functional but the function is hidden in the VPC Configuration Tool. Follow these steps to enable modify the colors of your LED(s)

- 1. Select Pro.
- 2. Select LED.

VPC Configuratio	n Tool [VPC-JOY-200325]				- 🗆 🗙
	VID: 181C PID:0008 Lighting Node PRO / VID: 1977 PID:0008 CoDE KT-LSB VID: 1977 PID:0005 Vibal PID Device VID: 1977 PID:005 Vibal PID Device VID: 1977 PID:0272 POCCAT Kore Amo VID:0805 PID:0210 Commander FRO (1 VID:031E PID:0210 Commander FRO (1 VID:031E PID:0210 Commander FRO (1	10 (00000000001A) 705002F731A0E051	LOAD VPC DEVICE		
	[G	Default color	Current color (may change by modes)		
Windows Joystic	ks VPC JOY TESTER	Direct Input Viewer		Device POB	Device online 0:5:48 65535

Your WarBRD and Constellation DELTA is now ready to be used in-game now you will have to configure the buttons to your choice and make sure to save those settings as well since it can be time-consuming. Below you can find a screen of all the buttons they remain the same from the previous guide.



Stock Constellation Delta button numbering and axis from firmware in the VPC Config Tool. Firmware file reference: CNT-ATMEGA32U4.